

Assembly Instructions



Remove screws from the upholstered seat using a #3 Phillips screwdriver. Rotate the swivel plate to the open position (as seen in diagram). Align swivel holes with the upholstered seat holes. Place one screw in each hole and tighten securely using a #3 Phillips screwdriver.



Assembly Instructions





Remove screws from the upholstered seat using a #3 Phillips screwdriver. Rotate the swivel plate to the open position (as seen in diagram). Align swivel holes with the upholstered seat holes. Place one screw in each hole and tighten securely using a #3 Phillips screwdriver.




Assembly Instructions





Remove screws from the upholstered seat using a #3 Phillips screwdriver. Rotate the swivel plate to the open position (as seen in diagram). Align swivel holes with the upholstered seat holes. Place one screw in each hole and tighten securely using a #3 Phillips screwdriver.

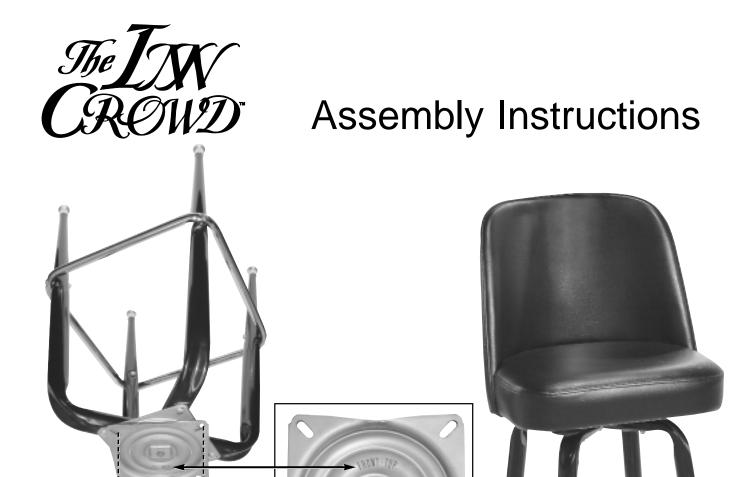

Remove screws from the upholstered seat using a #3 Phillips screwdriver. Rotate the swivel plate to the open position (as seen in diagram). Position the front of the bucket and the swivel plate so the words "FRONT-TOP" face the front of the bucket (see diagram of swivel plate). Align swivel holes with the upholstered seat holes. Place one screw in each hole and tighten securely using a #3 Phillips screwdriver.

Align front of bucket seat and "FRONT-TOP" of swivel together for proper positioning